
Overview

#### **WARNINGS**

- This product must be installed in accordance with all applicable codes by a person familiar with the product.
- Each luminaire must be properly supported during install.
- **DO NOT** join fixtures on the floor prior to lifting, or damage will occur.
- **Before beginning installation**, review our complete list of warnings by visiting www.mobern.com/instruction-sheets/Installation-Instructions-Warning.pdf.

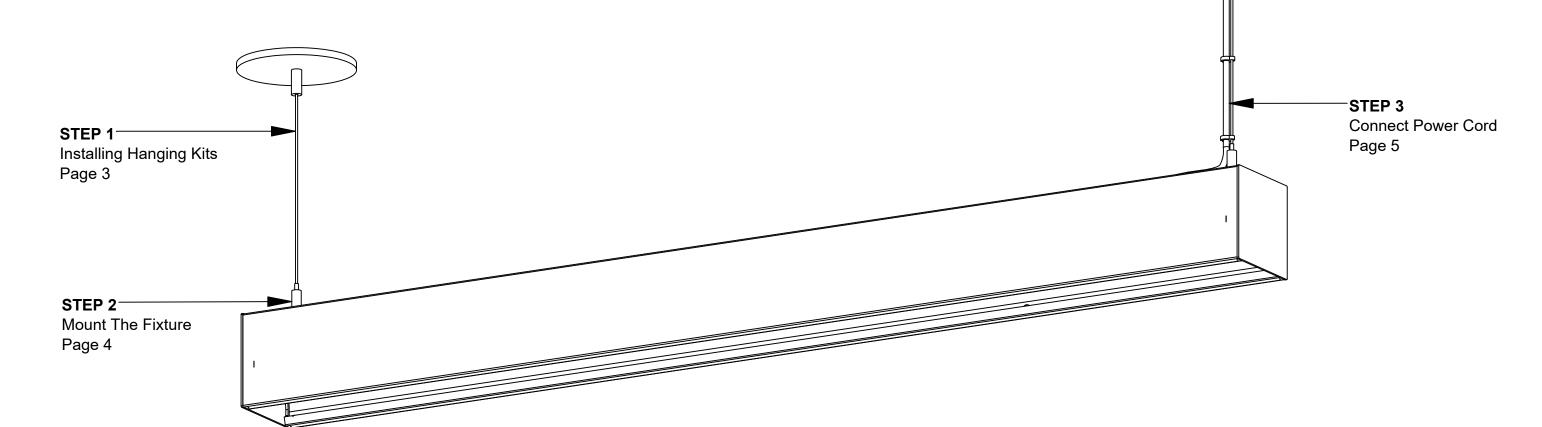



**Preparation** - Tools/Parts Identification

#### A. Identify Fixtures


#### **B. Tools Needed**


## **Mobern Lighting**

PART# 44IRPSFXXLTXXWXXXXLDMVXXKWH

VOLTAGE: 120-277, 50/60HZ WATTAGE: XX MAX FLUX: XXXX LUMENS

DATE CODE: XX/XX/XX TYPE: XX








Safety Glasses


- Use labels found on the box and inside fixture bodies to identify bodies.
- NOTE: Locations of labels can vary.
- Remove all fixtures from their boxes.
  Organize fixtures based on their labels at the install location.

- Always use proper safety equipment when installing fixtures.
  Tools shown are recommended for standard install. Tools needed
- may vary based on actual install location conditions.

#### C. Identify Parts



5" White Canopy - Non Power PN: CBGCAN51W




Mounting Bar PN: HMCGEMBARS1/8GN



Wire Strain Relief PN: HEYCO 1210



Pendant Cable PN: PCBL3014FT




5" White Canopy - Power PN: CBGCAN52W



Pendant Cable Clip PN: PCC375



Pendant Cable Cuff PN: PCCUF301



401-CABLE END PN: MGR-SE-1-4-20-EXT




**Pendant Power Cord** PN: PPC3014FT

Read entire install instructions before beginning installation.
Unpack all components and arrange in order of install steps. For help with installation, please contact us at www.mobern.com or call us at (800) 444-9288.




#### Step 1 - Installing Hanging Kits

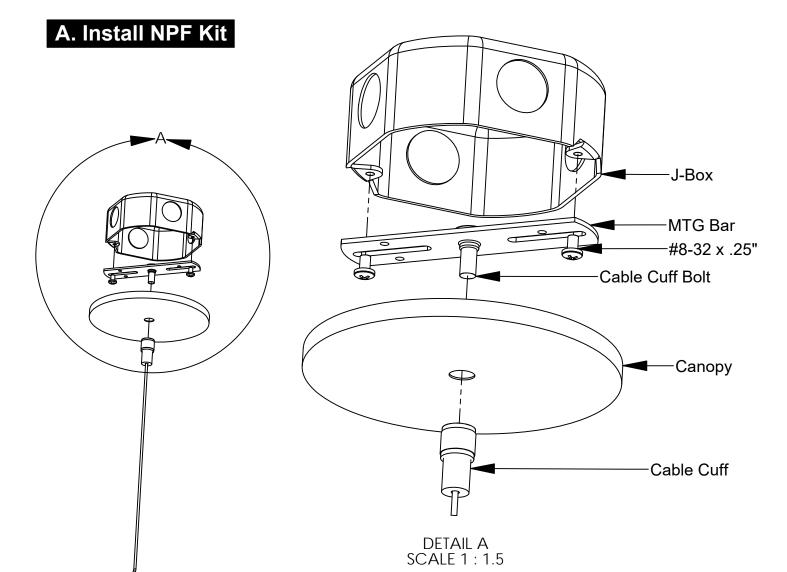






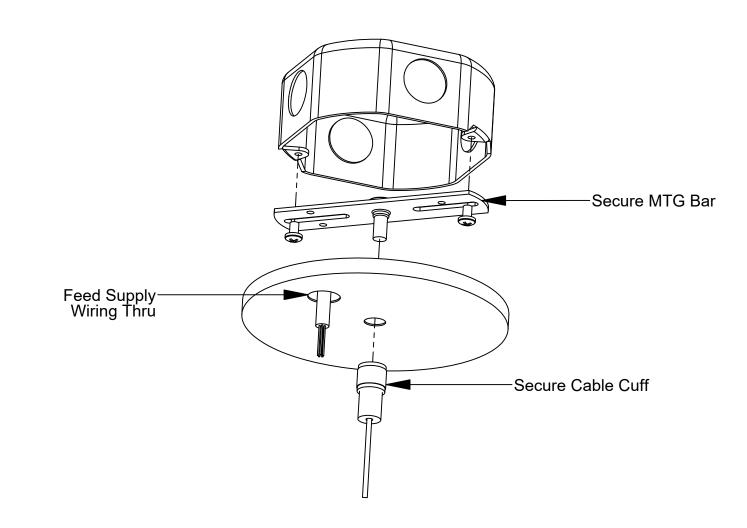


- Secure the mounting bar to the existing J-Box using the (2) #8-32 x .25" machine screws provided.
- Install the canopy over the cable cuff bolt with the outside edge facing upwards.
- Secure the cable cuff to the bolt, and tighten 1/4 turn with pliers.


- Repeat the previous steps to install the mounting bar to the J-Box.
- Feed the supply wiring thru the canopy prior to install.
- Repeat the previous steps to install the cable cuff to the bolt.



5" White Canopy - Non Power (Provided)



5" White Canopy - Power (Provided)




Mounting Bar (Provided)




Pendant Cable (Provided)

Step 2 - Mount The Fixture


#### A. Prepare Cable Assembly

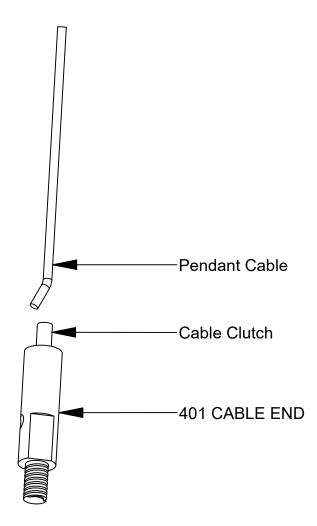

- Press the cable clutch in, then insert the cable end in to the cable clutch. Repeat for power end.
- The cable assembly is now ready to receive the fixture.

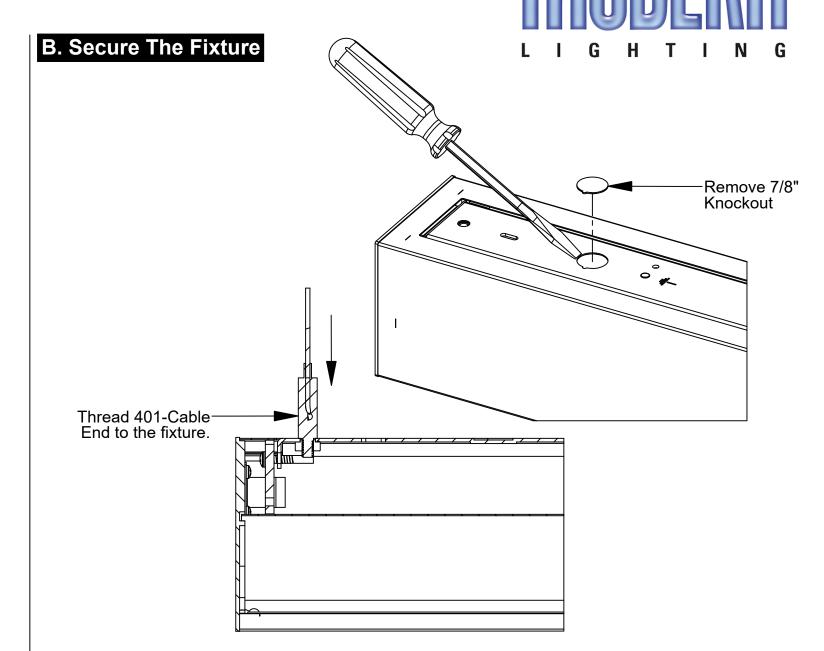



- Using a flat tipped screwdriver, remove the 7/8" knockout from the fixture at the power end.
- Insert the cable end in to the the re installed threads as shown above.
- Repeat steps for the opposite end of the fixture.
- Tighten the cable end 1/4 turn with pliers. Secure both ends of the fixture.





Pendant Cable Cuff (Provided)



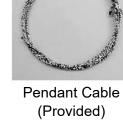

Flat Tip Screwdriver


401-CABLE END (Provided)


#### Step 3 - Connect Power Cord

#### A. Connect The Wires



# B. Install Grommet / Cable Clip

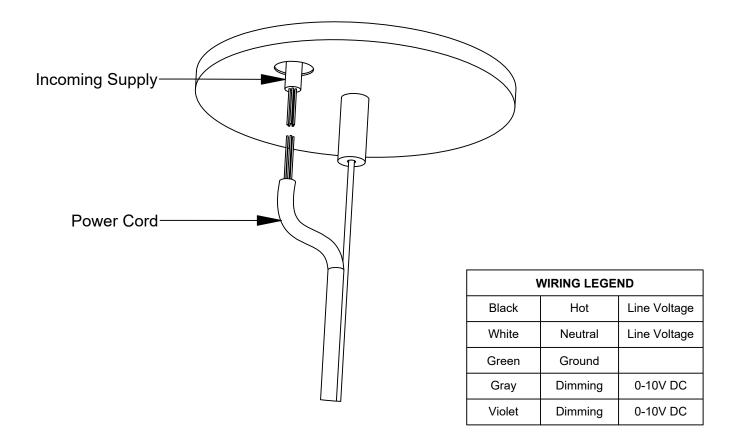

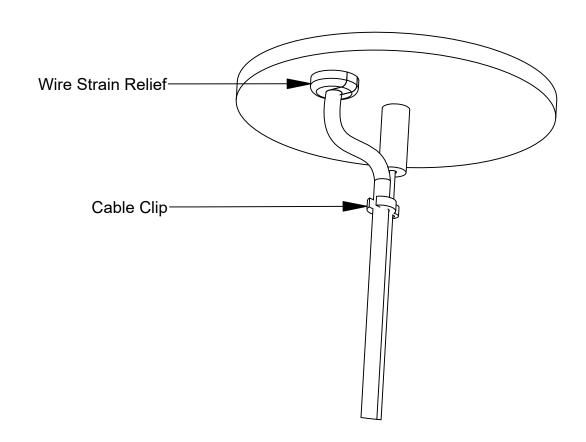

- Connect the incoming supply to the power cord by following all local, state and national codes.
- Match wire colors together. Refer to the chart above as needed.

- After connecting the wires, feed the connections back in to the J-Box.
- Install the wire strain relief, and press in to the opening until it clicks in to place.
- Install the cable clip as shown above. Install is now complete.





